



Instruction books for replacing the spring of 25608.OX

1. Remove the handle

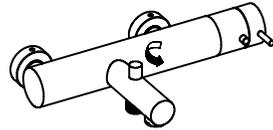


Turn the handle manually counterclockwise (as shown above), until the whole handle falls off.

2. Remove the G 1/2 outlet assembly part.

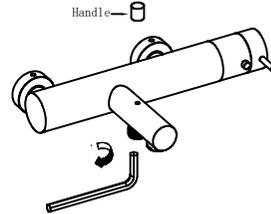

Use the 8mm allen key counterclockwise and rotate the G1 / 2 outlet joint part (as shown above, until the entire G1 / 2 outlet joint falls off



3. Remove the old spring

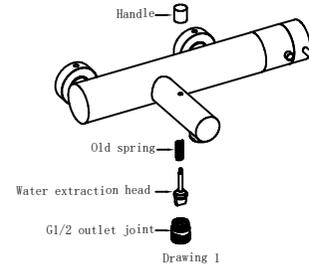

Drawing 2

Remove the old spring and replace the new one, and pay attention to the seal ring still on its position.

4. Install the new cone spring

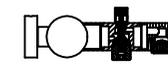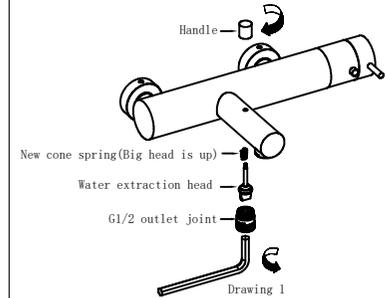


Drawing 2

1. Install the G1 / 2 outlet joint, water extraction head, new conical spring (big head is up), install as the picture one
2. Secure clockwise with S8 allen key, G1/2 outlet joint and then rotate the handle manually in clockwise, until tightly. Pay attention to the seal ring can not fall off, every single part install as picture two.


Instruction books for replacing the spring of 25609.OX

1. Remove the handle

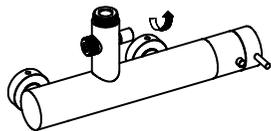


Turn the handle manually counterclockwise (as shown above), until the whole handle falls off.

2. Remove the G 1/2 outlet assembly part.

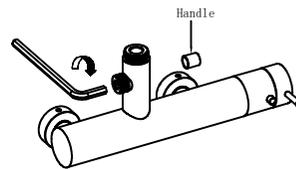

Use the 8mm allen key counterclockwise and rotate the G1 / 2 outlet joint part (as shown above, until the entire G1 / 2 outlet joint falls off


3. Remove the old spring

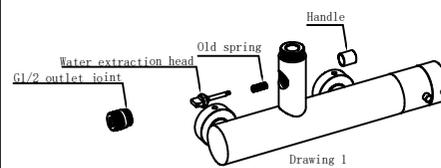

Drawing 2

Remove the old spring and replace the new one, and pay attention to the seal ring still on its position.

4. Install the new cone spring

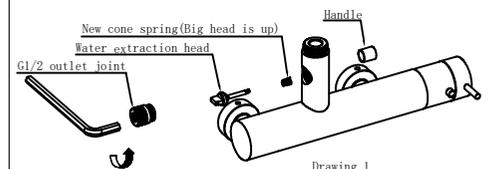

Drawing 2

1. Install the G1 / 2 outlet joint, water extraction head, new conical spring (big head is up), install as the picture one
2. Secure clockwise with S8 allen key, G1/2 outlet joint and then rotate the handle manually in clockwise, until tightly. Pay attention to the seal ring can not fall off, every single part install as picture two.